

Index

AR-07-0190

Index

Control button and jack entries as well as abbreviations such as SMPTE, MIDI and FM are in UPPER CASE.

A

Alg ONE or TWO, 4.32-35
Allocate, 4.3, 4.14, 4.18, 4.22, 4.34
Allocate Mode, 4.13-15
Arming tracks, 3.2, 3.5, 3.12
Audio Event Editor
 description, 1.8-9
 panel selection, 1.14-15
 panels, 1.10-11
 user buttons, 1.14-15
Audio recording
 Allocate Mode, 4.13-15
 Auto allocate, 4.18-19
 auto punch in, 4.5-7
 continuous, 4.4-9
 crossfades, 4.9
 cues, 4.10-21
 displays, 1.8-15
 documentation, 1.2-3
 long configuration, 3.6-7
 manual punch in, 4.4
 options, 4.2-3
 recording over a cue, 4.17, 4.20-21
 rehearsing a take, 4.8
 Retake, 4.16
 setting parameters, 3.5
 sound files from optical disk, 4.26-31
 sound files from poly memory, 4.22-25
 synced automatically to picture, 4.18-19
Auditioning
 cues in a sequence, 4.29
 sound files, 4.29
Auto, 3.2

B

Backing up
 cues, 6.14-17, 6.21
 projects, 6.2-7
 tracks, 6.8-9
 verify, 6.10-11
Block, 4.15, 4.19
Bouncing
 Direct-to-Disk tracks, 4.36-39

C

Caption
 editing, 6.18
 locking, 6.20
Category
 editing, 6.18
 locking, 6.20
Cfade, 4.9
Change Lock, 4.40
Continuous recording, 4.2-3
Control key, 1.8
Crossfades, 4.9
Cue
 backup to optical disk, 6.16-17, 6.21
 backup to Winchester, 6.14-15
 blocking, 4.15, 4.19
 caption and category editing, 6.18
 description, 4.10-11
 naming, 4.12
 playback, 5.4-5
 recalling from Winchester, 6.30-31
 recording, 4.2-3, 4.10-21
 recording over, 4.17

Cue (*con't*)
 recording synced to picture,
 4.18-19
 retake, 4.31
 start and stop times, 4.20
 time scale modification,
 4.32-35
 CUE DIR, 1.11
 CUE EDIT, 1.11
 Cue information, locking, 6.20
 Cue Lock, 4.3, 4.17, 4.20, 4.24
 CUE STOR, 1.11
 CUE TRIM, 1.11
 CuePB, 3.2

D

DB (dB), 3.3
 Default values
 restoring, 3.18
 saving, 3.17
 setting, 3.16
 DIG, 3.3
 Digital bounce (see Bouncing)
 Direct-to-Disk documentation,
 1.2-3
 Direct-to-Disk recording (see
 Audio recording)
 Direct-to-Disk tracks
 arming, 3.2, 3.5
 arming from keyboard
 control panel, 3.12
 assignment from keyboard
 control panel, 3.10-11
 backup to tape, 6.8-9
 bouncing, 4.36-39
 description, 1.4-5
 displaying, 2.10
 erasing, 3.20-21

Direct-to-Disk tracks (*con't*)
 expanded configuration,
 3.8-9
 gain, 3.3
 inputs, 3.3
 locking, 4.40-41
 mode, 3.2
 monitoring, 3.22
 output, 3.4
 pan, 3.4
 playing back, 5.2-3
 protecting, 4.40-41
 recalling from tape, 6.24-25
 reconfiguring, 3.6-9
 soloing from keyboard
 control panel, 3.13
 status, 3.2
 volume, 3.4

Disk time, 2.6-9

Displays

 audio recording, 1.8-15
 track, 1.8-9
 Documentation, Direct-to-Disk,
 1.2-3

E

Erase, 3.6
 Erase 1, 3.6
 Erase 2, 3.6
 Erase All, 2.12, 3.6, 3.8
 Erase Proj, 2.12
 Erasing Direct-to-Disk tracks,
 3.20-21
 EVENTS, 1.11
 Expanded track configuration,
 3.8-9

Index (con't)

F G

Gain, 3.3

H I

Input, 3.2

J K

Keyboard control panel
 track arming, 3.12
 track assignment, 3.10-11
 track soloing, 3.13

L

Lock, 4.41
Locked, 2.11
Locking
 projects, 4.40
 tape, 6.12-13
 tracks, 4.41
Long track configuration, 3.6-7

M

M, 2.11
Main Menu, 1.8-9
Manual, 4.3-4, 4.14, 4.17
Monitoring Direct-to-Disk
 tracks, 3.22
MOTION, 1.11

N

Name
 cue, 4.12
 project, 2.4
 track, 2.10

O

Optical disk, space and time
 available, 6.19
Optical Transfer panel, 4.26-31
OptXfr, 4.26-31
OUT, 3.3
Out, 3.4

P

Pan, 3.4
Panels, Audio Event Editor,
 1.10-11, 1.14-15
PolyXfer, 4.3, 4.22-25
Project
 backup to tape, 6.2-7
 create, 2.4-11, 3.19
 current, 1.6
 default values, 3.16-19
 description, 1.4-7
 End time, 2.5
 erasing, 2.12
 locking, 4.40
 modify settings, 2.11
 name, 2.4
 parameter entry, 2.8-9
 protecting, 4.40
 recalling from tape, 6.22-23,
 6.26-29

Project (*con't*)

- recalling with different track configurations, 6.26-29

- sampling rate, 2.4

- selecting, 2.2-3

- Start time, 2.5

- status, 2.11

Project Directory

- description, 1.8-9

- reconfiguring tracks, 3.6-9

- tape backup, 6.2-7

Project Manager

- description, 2.2-3

- modes, 1.12-13

- parameter settings, 2.4-9

- tracks displayed, 2.10

Project time, 2.6-9

PROJECTS, 1.11

Protecting

- projects, 4.40

- tapes, 6.12-13

- tracks, 4.41

Punch In, 4.3-4, 4.6, 4.8

Q R

Ready, 3.2

Recalling

- cues, 6.30-31

- projects, 6.22-23, 6.26-29

- tracks, 6.24-25

RECORD, 1.11

- Recording, Direct-to-Disk (see Audio recording)

REHEARSE, 4.8

Repro, 3.2

Retake, 4.16, 4.31

S

Safe, 3.2

Sampling rate, 2.4

Select Project, 3.2

Sequencer, 4.3, 4.6, 4.8, 4.18, 4.20

Sequencer Motion Control

- panel, 1.11, 5.2-3

Show All, 1.12-13

Show Project, 1.12-13

Size, 2.10

Skip, 6.5, 6.22, 6.24

Skip All, 6.5, 6.8

Sound files

- audio recording, 4.22-31

- auditioning, 4.29

- caption and category

- editing, 6.18

- information, 4.28

- recording over a cue, 4.24-25

- transfer to Direct-to-Disk, 4.22-31

Status

- messages, 2.11

- project, 2.11

STM, 3.3

SYNC, 1.11

Synchronization, 3.14-15

T

Tab, 1.8

Tape storage

- backing up projects, 6.6-7

- backing up tracks, 6.8-9

- overview, 6.4-5

- recalling projects, 6.22-23, 6.26-29

- recalling tracks, 6.24-25

- status indicators, 6.2-3

- write protection, 6.12-13

Index (con't)

Time displays, 2.6-9
Time scale modification (TSM),
 4.3, 4.32-35
Trig Start/Stop, 4.5, 4.13
Trigger (Trig) switch, 4.2-3
Track Display, 1.8-9
Tracks, Direct-to-Disk (see
 Direct-to-Disk tracks)
Trig Start/Stop, 4.5, 4.13
TRK, 3.3
Trk Start/Stop, 4.5
TSM (see Time scale
 modification)

U

Unlock, 2.11, 4.41
User buttons, Audio Event
 Editor, 1.14-15

V

Verify backup, 6.10-11
Volume, 3.4

W X Y Z

Winchester drives
 backing up cues, 6.14-15
 recalling cues, 6.30-31